



BOTTOM 5-3/8 X 14-1/2 X 1/2 (1 EA)

1\"/>

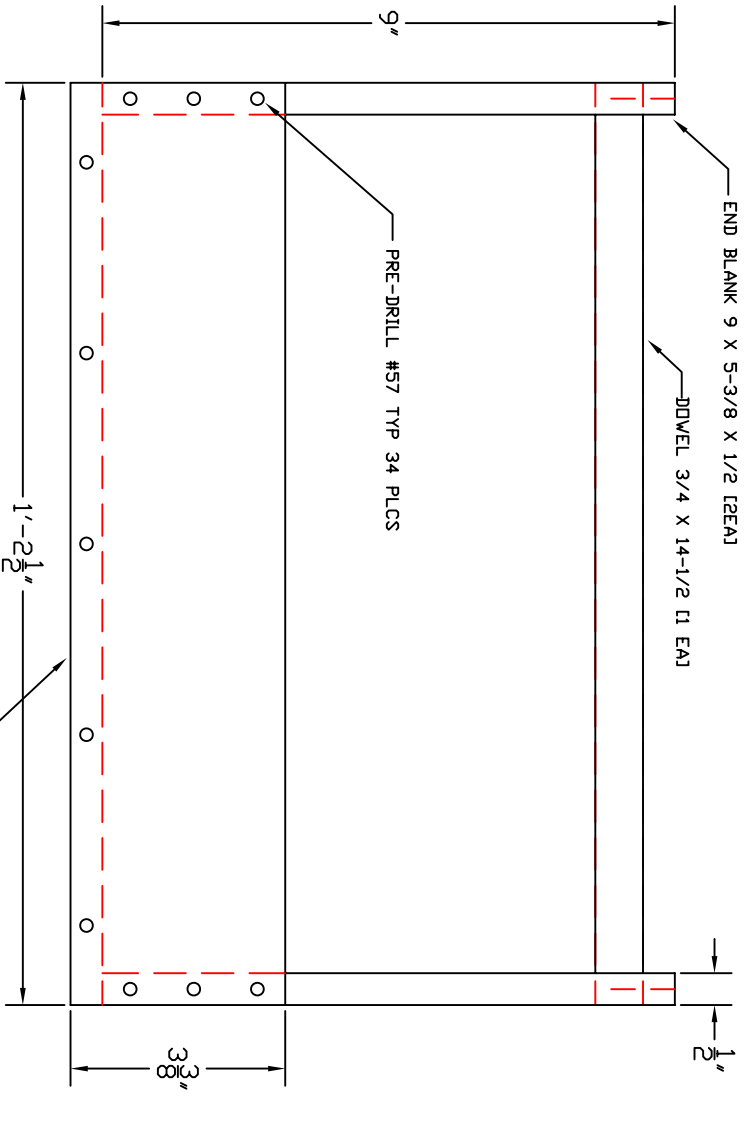

PRE-DRILL #57 TYP 34 PLCS

- ASSEMBLY ORDER**
1. INSTALL HANDLE IN ENDS
  2. GLUE & NAIL BOTTOM TD ENDS
  3. GLUE & NAIL SIDES
  4. NAIL HANDLE @ TOP OF ENDS
- Start nails in bottom & sides before installing  
 Use care in aligning parts before nailing  
 Decorate as desired after assembly

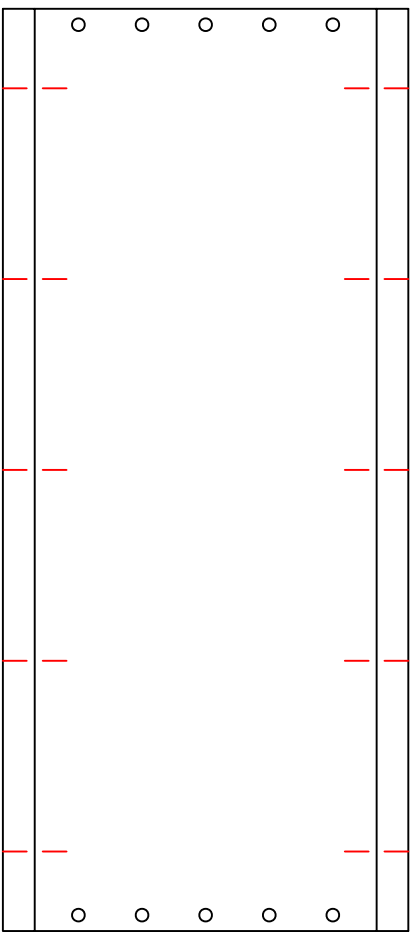

TITLE:	Cub Scout Tool Box Project
DATE:	Jan 2006
BY:	JD
REV:	0
FILE:	Toolbox.dwg